



TIME	ITEM	LOCATION	OPERATION	DETAILED INSTRUCTIONS ON PAGES
DAILY Beginning each day and every 1 to 10 Working Hours, depending on dust and mud conditions	1 2 3 4	Air Cleaner Clutch Compartment Breathers Transmission Case Breather Track Wheel System	Add Oil If Low—Change Oil If Dirty Wash In Gasoline—Dip In Oil Wash in Gasoline—Dip In Oil Lubricate—(Check Rotation Of All Wheels)	12 18 20 21
Every 4 to 5 Working Hours	5 6	Clutch Grease Cup Water Pump Grease Cup Power Take-Off Attachments	Grease—(3 Full Turns) Grease—(3 Full Turns) Check Oil Level—Add Oil If Required	17 11 24
Every 8 to 10 Working Hours	7 8	Crankcase Oil Level Gauge Level Testing Holes—Rear End	Check Oil Level—Add Oil If Required Check Oil Level—Add Oil If Required	13 20
WEEKLY Every 50 to 60 Working Hours	9 10 11 12	Oil Filter Oil Pan Drain Plug Fan Clutch Compartment Drain Plug	Drain and Clean Drain, Flush Out, Refill Lubricate—(Check Belt Slack & Blade Tightness) Remove And Clean Hole In Plug	14 14 12 17
MONTHLY Every 100 to 300 Working Hours	13 14 1	Engine Oil Filler & Breather Oil Pan Screen Air Cleaner Governor Control Linkage Clutch Release Linkage	Remove And Clean Remove And Clean Remove, Clean And Oil Clean And Oil Oil	13 14 12 16 17
(Follow Detailed Instructions)	15 4 16	Drain Plugs—Rear Compartments Track Wheel System Magneto	Drain All Compartments And Refill Drain And Flush Each Bearing—Refill System Oil	20 21 16
Every 1000 Hours	17	Oil Pan	Remove Pan—Clean Sludge From Walls And Pan	14

Always refer to "LUBRICATION RECOMMENDATIONS"

booklet furnished with tractor, for correct grades of lubricant.